


## **Preventative Maintenance Schedule**

End User Location:		Date Installed:		Dispenser Date Code: (Located Inside Dispenser)	
PERIOD	Check FASTDRAW Cap for Excess Chemical Build-Up	Check all hose connections between water supply line and outlet tubes.	Check INTERNAL valve systems for leaks.	Check tubing and check valve between bottle and INTERNAL Valves.	Other
6 MONTHS	х	х		х	
12 MONTHS	х	х	x	х	
18 MONTHS	х	х		х	
24 MONTHS	x	x	x	х	
30 MONTHS	х	х		х	
36 MONTHS	х	х	x	х	
42 MONTHS	х	х		х	
48 MONTHS	х	х	x	х	
54 MONTHS	х	х		х	
60 MONTHS	x	x	x	х	

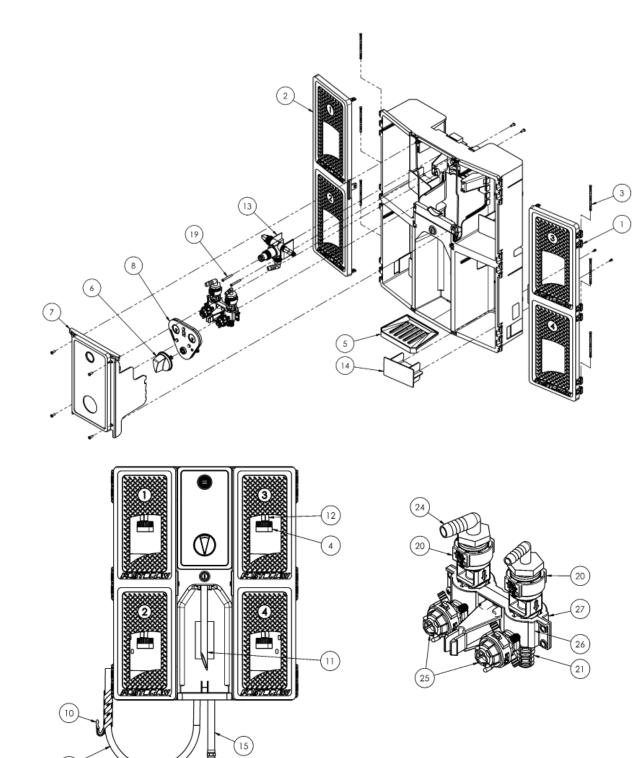





#### Check Fastdraw cap (Part #4) for excess build-up:

- · Check underside of cap for build up.
- Wipe with a clean cloth and water to remove buildup
- Ensure tubing (#20) is tightly connected to cap.

# Check all hose connections between water supply line and outlet tubes (part #2, #24. #13, #25)

- Tighten leaky hose connections, if dispenser in-let leaks, replace strainer washer (#16). If inlet hose is leaking replace (#15).
- If leakage occurs around part (#20), replace part.
   If part #17 shows visible wear, replace as needed.
- Check inner tubes (#12), if cracked or visibly damaged, replace.

#### Check valve assembly (#24, 20, and #25) for leaks:

- If water is dripping out of one or both of the out-let tubes (#9 or #11), check to make sure the outlet tubes are securely on part #21 and #23 (not shown).
- If water is leaking out of the action gap (part #20, carefully tighten ¼" turn). If it continues to leak, replace it.

#### Check tubing (#12) between bottle and valve system:

 Check several bottles for proper drawing. If every product is not drawing consistently, clean or re place cap assembly, (#4). Can be ordered as Betco part #9250200.

DO NOT OVERTIGHTEN CAP! LIGHTLY HAND TIGHTEN ONLY! IF TOO TIGHT PRODUCT WILL NOT DRAW.

LOOSEN CAP 1/4 TURN TO PRODUCE CONSISTENT CHEMICAL DRAW.





No.	Description	Qty.	Color	Part No.
1	Right Door	1	Gray	98532-00
2	Left Door	1	Gray	98533-00
3	Hinge Pins	6	Black	98534-00
4	Docking Caps	4	Gray	92502-00
5	Drip Tray	1	Red	98536-00
6	Selector Dial	1	Red	98537-00
7	Cover	1	Black	98538-00
8	Transmission	1	Gray	98539-00
9	Bucket Fill Hose (Action Gap)	1	Gray	98317-00
10	Bucket Fill Hose Hook	1	Gray	98315-00
11	Bottle Fill Hose (Action Gap)	1	Gray	98318-00
	1/4" Vinyl Tubing (Bottle & Bucket Fill)	8	Clear	98351-00
13	Push Button Bucket Fill Assembly	1	Red	98540-00
	Back Stop	4	Black	98541-00
15	Water Supply Hose	1	Black	98542-00
16	Strainer Washer	1	Black	98308-00
17	Wall Mounting Kit (4 Anchors & 4 Screws) [not shown]	4	White/Chrome	98543-00
18	Keys [not shown]	2	Chrome	98337-00
19	#8 Hi Lo Screw x 1/2" Long	12	Stainless Steel	98309-00

## **Action Gap - Manifold Valve Assembly**

20	Bucket Fill Action Gap - Back Flow Preventer	1	White	98312-00
21	Bucket Fill Proportioner	1	White	98313-00
22	Bottle Fill Action Gap - Back Flow Preventer	1	White	98312-00
23	Bottle Fill Proportioner [not shown]	1	Green	98314-00
24	Elbow Fittings	2	White	98545-00
25	Manifold Selector Valve	2	Black	98546-00
26	Manifold Valve Bracket Front	1	Gray	98547-00
27	Manifold Valve Bracket Back	1	Gray	98548-00

### **Air Gap - Manifold Valve Assembly**

	•			
28	Bucket Fill Air Gap & Proportioner	1	White	98289-00
29	Bottle Fill Air Gap & Proportioner	1	Green	98299-00
30	Bucket Fill Hose - Air Gap Only	1	Gray	98300-00
31	Bottle Fill Hose - Air Gap Only	1	Gray	98301-00
32	Priming Tube - Air Gap Only	1	Clear	98302-00

SUGGESTED REPLACEMENT PATS TO HAVE ON HAND					
BETCO PART NUMBER	PART DESCRIPTION				
#800500	Vinyl tubing (¼" x 7")				
#9250200	Fastdraw PRO Docking Cap (Each)				
#9839600 (#91599 Air Gap Unit)	Bucket Fill Air Gap & Proportioner				
#9829900 (#91599 Air Gap Unit)	Bottle Fill Air Gap Proportioner				
#9831300 (#9217400 Action Gap Unit)	Bucket Fill Action Gap				
#9831400 (#9217400 Action Gap Unit)	Bottle Fill Action Gap				
#9830800	Strainer Washer				
#9831200	Action Gap Backflow Preventer				
#9854600	Manifold Selector Valve				

